



## **HSA2000 Dual Channel Series**

## **Handheld Spectrum User Manual**

**For product support, visit:[www.owon.com.hk/download](http://www.owon.com.hk/download)**

※: The illustrations, interface, icons and characters in the user manual may be slightly different from the actual product. Please refer to the actual product.

## **Dec. 2025 edition V1.0.4**

Copyright © LILLIPUT Company. All rights reserved.

The LILLIPUT's products are under the protection of the patent rights, including ones which have already obtained the patent rights and those which are applying for. The information in this manual will replace all that in the materials published originally.

The information in this manual was correct at the time of printing. However, LILLIPUT will continue to improve products and reserves the rights to change specification at any time without notice.

**OWON**® is the registered trademark of the LILLIPUT Company.

### **Fujian LILLIPUT Optoelectronics Technology Co., Ltd.**

No. 19, Heming Road

Lantian Industrial Zone, Zhangzhou 363005 P.R. China

**Tel:** +86-596-2130430

**Fax:** +86-596-2109272

**Web:** [www.owon.com.cn](http://www.owon.com.cn)

**E-mail:** [info@owon.com.cn](mailto:info@owon.com.cn)

## General Warranty

We warrant that the product will be free from defects in materials and workmanship for a period of 3 years from the date of purchase of the product by the original purchaser from the our Company. The warranty period for accessories such as probes, adapter is 12 months. This warranty only applies to the original purchaser and is not transferable to a third party.

If the product proves defective during the warranty period, we will either repair the defective product without charge for parts and labour, or will provide a replacement in exchange for the defective product. Parts, modules and replacement products used by our company for warranty work may be new or reconditioned like new. All replaced parts, modules and products become the property of our company.

In order to obtain service under this warranty, the customer must notify our company of the defect before the expiration of the warranty period. Customer shall be responsible for packaging and shipping the defective product to the designated service centre, a copy of the customers proof of purchase is also required.

This warranty shall not apply to any defect, failure or damage caused by improper use or improper or inadequate maintenance and care. We shall not be obligated to furnish service under this warranty a) to repair damage resulting from attempts by personnel other than our company representatives to install, repair or service the product; b) to repair damage resulting from improper use or connection to incompatible equipment; c) to repair any damage or malfunction caused by the use of not our supplies; or d) to service a product that has been modified or integrated with other products when the effect of such modification or integration increases the time or difficulty of servicing the product.

Please contact the nearest Sales and Service Offices for services.

**Excepting the after-sales services provided in this summary or the applicable warranty statements, we will not offer any guarantee for maintenance definitely declared or hinted, including but not limited to the implied guarantee for marketability and special-purpose acceptability. We should not take any responsibilities for any indirect, special or consequent damages**

---

# Table of Contents

<b>1. Safety Information .....</b>	<b>1</b>
Safety Terms and Symbols .....	1
Safety Requirements .....	1
<b>2. How to Implement the General Inspection .....</b>	<b>5</b>
<b>3. How to Use the Oscilloscope .....</b>	<b>6</b>
The Structure of the Oscilloscope .....	6
Front Panel and Keys .....	6
Side Panel .....	8
Introduction to the User Interface of the Oscilloscope .....	9
Functional Check .....	10
Probe Compensation .....	11
Probe Attenuation Coefficient Setting .....	12
Safe Use of Probe .....	13
Vertical System .....	14
Horizontal System .....	15
Measuring System .....	15
Automatic Measurement .....	15
Cursor Measurement .....	18
Display unknown signals using automatic Settings .....	19
Trigger System .....	19
Save Settings .....	20
System Settings .....	22
<b>4. How to Use the Multimeter .....</b>	<b>25</b>
About This Chapter .....	25
Instrument Interface .....	25
<b>5. How to Use the Spectrum .....</b>	<b>27</b>
About This Chapter .....	27
Spectrum Interface .....	27
Parameter Input Interface .....	28
Frequency System .....	29
Start Frequency .....	29
Stop Frequency .....	29
Center Frequency .....	30
Span .....	30
Full Span .....	31
Zero Span .....	31
Last Span .....	32
Amplitude System .....	32
Reference Level .....	32
Scale/Div .....	33
Attenuation .....	33

---

Reference Unit .....	34
Reference Offset .....	34
<b>Bandwidth System .....</b>	<b>35</b>
RBW .....	35
VBW .....	35
<b>Marker System .....</b>	<b>36</b>
Marker .....	36
Marker Function .....	37
Marker-> .....	38
Peak .....	39
<b>Trigger System .....</b>	<b>39</b>
Auto .....	40
Video .....	40
<b>Pre-amplifier .....</b>	<b>40</b>
<b>Trace .....</b>	<b>40</b>
Clear & Write .....	40
Max Hold .....	41
Min Hold .....	41
View .....	41
<b>Automatic Research .....</b>	<b>41</b>
<b>6. Communication with PC .....</b>	<b>42</b>
<b>7. Troubleshooting .....</b>	<b>43</b>
<b>8. Technical Specifications .....</b>	<b>45</b>
Oscilloscope .....	45
Multimeter .....	47
Spectrum .....	49
General Technical Specifications .....	52
<b>9. Appendix .....</b>	<b>53</b>
<b>Appendix A: List of Accessories .....</b>	<b>53</b>
<b>Appendix B: Maintenance and Cleaning .....</b>	<b>53</b>
General maintenance .....	53
Charging and Replacement of Battery .....	54
Replacement of Lithium Battery .....	55

# 1. Safety Information

(Before using this product, please read the safety information in advance)

## Safety Terms and Symbols

### Terms in this manual

The following terms may appear in this manual:



**Warning:** Warning indicates conditions or practices that could result in injury or loss of life.



**Caution:** Caution indicates the conditions or practices that could result in damage to this product or other property.

### Terms on the product

The following terms may appear on this product:

**Danger:** Indicates an immediate hazard or injury possibility.

**Warning:** Indicates a possible hazard or injury.

**Caution:** Indicates potential damage to the instrument or other property.

## Safety Symbols

**Symbols on the product.** The following symbol may appear on the product:



Hazardous Voltage



Refer to Manual



Protective Earth Terminal



Chassis Ground



Test Ground

## Safety Requirements

Please read the following safety precautions to avoid personal injury and

prevent damage to this product or any other products connected to it. In order to avoid possible hazards, this product can only be used within the specified range.

- **Only a qualified person should perform internal maintenance.**
- **Check all Terminal Ratings.** To avoid fire or shock hazard, check all ratings and markings on this product. Refer to the user manual for more information about ratings before connecting to the instrument.
- **Do not operate without covers.** Do not operate the instrument with covers or panels removed.
- **Avoid exposed circuit.** Be careful when working on exposed circuitry to avoid risk of electric shock or other injury.
- **Do not operate if any damage.** If you suspect damage to the instrument, have it inspected by qualified service personnel before further use.
- **Do not operate in damp conditions.**
- **Do not operate in an explosive atmosphere.**
- **Keep product surfaces clean and dry.**
- **Using the equipment not in accordance with the method specified by the manufacturer may damage the protection provided by the equipment.**

#### **Warning:**

To prevent electric shock or fire, use a suitable power adapter. Only power adapters that are dedicated to this product and approved for use in the country of use may be used.


#### **Warning:**

The two channels of the oscilloscope are non-isolated channels. Note that the channel should use a common reference when measuring, and the ground wires of the two probes cannot be connected to two non-isolated places with different DC electrical levels, otherwise it may cause a short circuit due to the ground wire connection of the oscilloscope probe.


#### **Warning:**

Note that the channel should use a common reference when measuring, otherwise it may cause a short circuit due to the ground wire connection of the oscilloscope probe.

Schematic diagram of the internal ground wire connection of the oscilloscope:

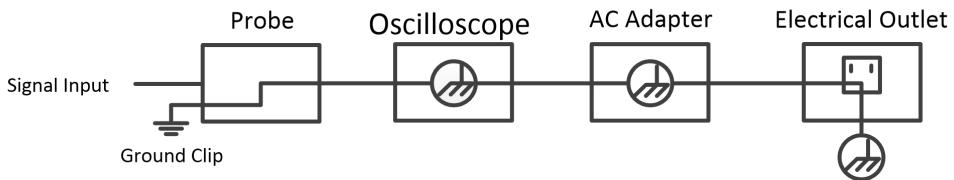

Schematic diagram of internal ground connection when oscilloscope is connected with computer through the port:

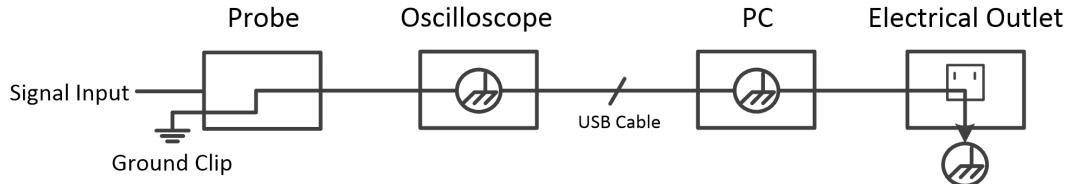

When the oscilloscope is AC powered by adapter or connected with AC powered computer through the port, it is not allowed to measure the primary power supply of power grid.

### **Warning:**

If the input port of the oscilloscope is connected to a voltage with a peak value higher than 42V (30vrms) or a circuit with a peak value of more than 4800 VA, the following measures shall be taken to avoid electric shock or fire:

- Only voltage probes, test wires and adapters with proper insulation attached to the oscilloscope or accessories suitable for oscilloscope instrument series products specified by our company shall be used.
- Before use, check the multimeter test probe, oscilloscope probe and accessories for mechanical damage. If damage available, replace it.
- Remove all unused multimeter test probes, oscilloscope probes and accessories (power adapter, USB, etc.).
- Firstly, plug the power adapter into the AC socket, and then connect it to the oscilloscope.
- When testing in a CAT II environment, do not connect a voltage higher than 400 V to any input port.
- When testing in a CAT II environment, do not connect a voltage with a voltage difference of more than 400 V to the isolated input port.

- Do not use an input voltage higher than the rated value of the instrument. Pay special attention when using 1:1 test wires, because the probe voltage will be directly transmitted to the oscilloscope.
- Do not touch the bare metal BNC or banana plug.
- Do not insert metal objects into the connector.
- Use the oscilloscope only in the specified way.
- The voltage rating mentioned in the "warning" information is the limited value of "working voltage". They represent V ac rms (50-60 Hz) in AC sine wave applications; and V dc in DC applications. CAT is the prefix, and II refers to the level. Level II is the low voltage and high energy level, which refers to the local electrical level applicable to electrical appliances and portable equipment.

## **2. How to Implement the General Inspection**

After you get a new oscilloscope, it is recommended that you should make a check on the instrument according to the following steps:

### **(1) Check whether there is any damage caused by transportation.**

If it is found that the packaging carton or the foamed plastic protection cushion has suffered serious damage, do not throw it away first till the complete device and its accessories succeed in the electrical and mechanical property tests.

### **(2) Check the Accessories**

The supplied accessories have been already described in the "Appendix A: List of Accessories" of this Manual. You can check whether there is any loss of accessories with reference to this description. If it is found that there is any accessory lost or damaged, please get in touch with our distributor responsible for this service or our local offices.

### **(3) Check the Complete Instrument**

If it is found that there is damage to the appearance of the instrument, or the instrument can not work normally, or fails in the performance test, please get in touch with our distributor responsible for this business or our local offices. If there is damage to the instrument caused by the transportation, please keep the package. With the transportation department or our distributor responsible for this business informed about it, a repairing or replacement of the instrument will be arranged by us.

### 3. How to Use the Oscilloscope

#### The Structure of the Oscilloscope

#### Front Panel and Keys

The front panel and keys of the oscilloscope are shown in Figure 3- 1:

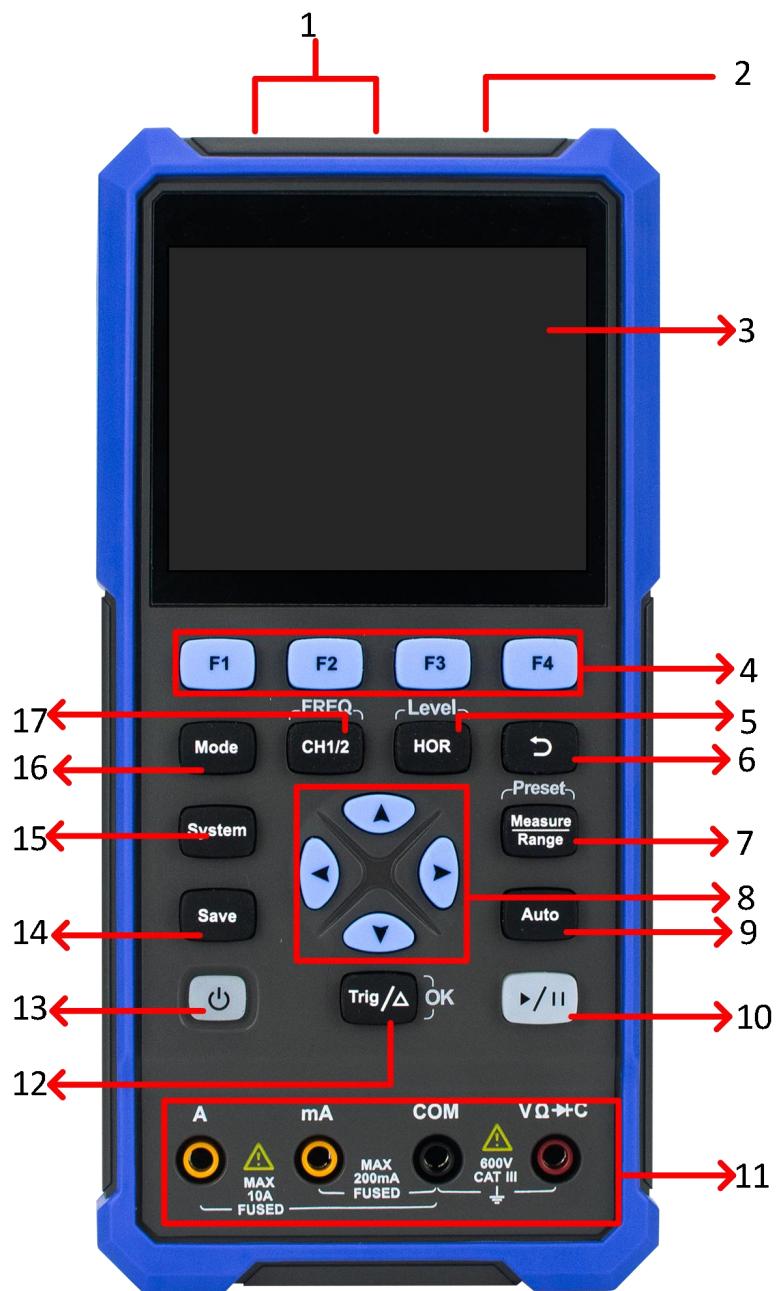


Figure 3- 1:Front Panel of the Oscilloscope

Description:

1. CH1 and CH2 input connectors.
2. Spectrum measured signal input connector..
3. Display area.
4. The **F1 - F4** keys are multi-function keys. In each menu mode, press the corresponding key to select the corresponding menu item.
5. After pressing the **HOR** key, through the key **▲ ▼**, you can change the horizontal time base setting, and observe the change of the state information caused by it; it can also be found that the **horizontal time base** display corresponding to the status bar has changed correspondingly; the horizontal displacement of the signal in the waveform window can be adjusted by pressing **◀ ▶**.
6. Return key. Press this key to return to the previous menu; when the menu is the first level, press the return key to close the menu.
7. Measurement menu key (oscilloscope), range key (multimeter) or reset key(spectrum).
8. Zoom or move key:  
Function of direction keys **▲ ▼**: used for the up and down movements of waveform, the time base changing, the voltage cursor movements and the trigger of electrical level change in the oscilloscope;  
Function of direction keys **◀ ▶**: used for the left and right movements of waveform, the voltage position changing and the movements of time cursor in the oscilloscope.
9. Automatic setting key (oscilloscope), automatic range key (multimeter), or automatic search key(spectrum).
10. Stop / run key (oscilloscope) or value hold key (multimeter) or output/disable signal key(spectrum).
11. Input end of the multimeter.
12. Trigger menu key (oscilloscope), relative value key (multimeter) or select

the numeric key(spectrum).

13.  Power switch key.
14. Enter the save settings key.
15. Enter the system settings key.
16. Switch key for working state of oscilloscope and multimeter.
17. CH1 / CH2 - channel switch key.

## Side Panel



Figure 3- 2: Side Panel of the Oscilloscope

Description:

1. Probe compensation: 3.3V/1kHz square wave signal output.
2. Charging or USB communication interface.
3. Bracket.

## Introduction to the User Interface of the Oscilloscope

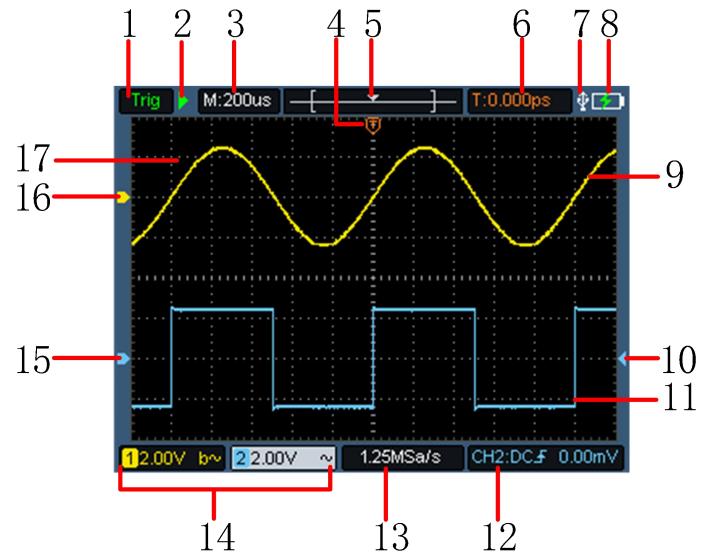


Figure 3-3:Oscilloscope Interface

Description:

1. The trigger status indicates the following information:

Auto: Automatic mode. The waveform is being collected without triggering.

Trig: A trigger has been detected and post trigger information is being collected.

Ready: All pre trigger data have been obtained and the oscilloscope is ready.

Scan: Scan mode. Continuously collect and display waveform data.

Stop: Stop collecting waveform data.

2. Run/stop.
3. Time base display.
4. The pointer indicates the trigger horizontal position.
5. The pointer indicates the trigger position within the current storage depth.
6. Indicating the value of the current trigger horizontal displacement, and displaying the position of the current waveform window in the memory.

7. It indicates that there is a USB disk connecting.
8. Battery power and external power supply indication.
9. Channel 1 waveform.
10. The pointer indicates the trigger electrical level position of the channel.
11. Channel 2 waveform.
12. The icon indicates trigger-related information, including trigger channel, coupling mode, trigger type and trigger electrical level. For details, please refer to P19 Trigger System.
13. The current sampling rate.
14. The channel information reading indicates the voltage position of the corresponding channel.  
The icon indicates the coupling mode of the channel:  
"—" means DC coupling;  
"~" means AC coupling;  
"⊥" means ground coupling.
15. The pointer indicates the grounding reference point (zero position) of the waveform displayed in CH2 channel. If there is no pointer indicating the channel, it means that the channel is not open.
16. The pointer indicates the grounding reference point (zero position) of the waveform displayed in CH1 channel. If there is no pointer indicating the channel, it means that the channel is not open.
17. Waveform display area.

## Functional Check

Making a quick functional check to verify that the instrument is working properly. Please proceed as follows:

**1. Press the switch at the bottom left of the main unit .**

The internal relay will make a slight click. The instrument executes all self-check items, and the startup screen appears. Press the front panel key

**System**, the default probe menu attenuation coefficient setting value is **10X**.

**2. The switch on the oscilloscope probe is set to 10X and connected with the CH1 channel.**

Align the slot on the probe with the plug on the bayonet nut connector (**BNC**) of the **CH1** connector and insert it, then turn the probe to the right and tighten it.

Connect the probe tip and ground clamp to the connector of the probe compensator. Please pay attention to the terminal polarity. The square terminal represents the signal output, and the round terminal represents the reference ground.

**3. Press the "Auto" key on the front panel.**

Within a few seconds, a square wave display (1kHz/3.3Vpp) can be seen, as shown in Figure 3- 4.

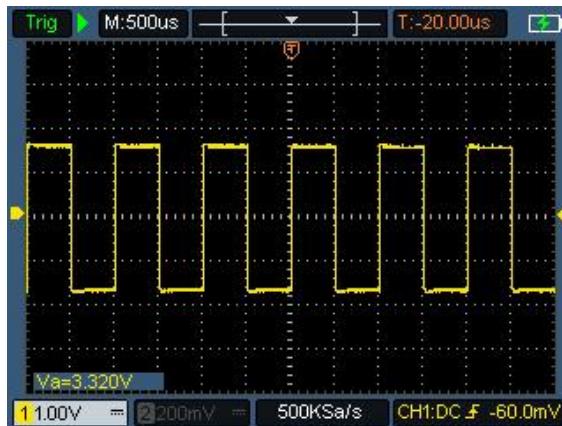


Figure 3-4: Automatic Setting  
Repeat steps 2 and 3 on the CH2 channel.

## Probe Compensation

When connecting the probe to any input channel for the first time, make this adjustment to match the probe with the input channel. The probe without compensation or deviation compensation will lead to measurement error. To adjust the probe compensation, please follow the following steps:

1. Set the probe menu attenuation coefficient to **10X**, and set the switch on the

probe to **10X** (see "Probe Attenuation Coefficient Setting" in P9), and connect with CH1. If a hook probe is used, make sure it is in close contact with the probe. Connect the probe tip to the signal output connector of the probe compensator, and connect the reference wire clamp to the ground wire connector of the probe compensator, and then press the **Auto** key on the front panel.

2. Check the displayed waveform and adjust the probe until the compensation is correct. See Figure 3-5 and Figure 3-6.

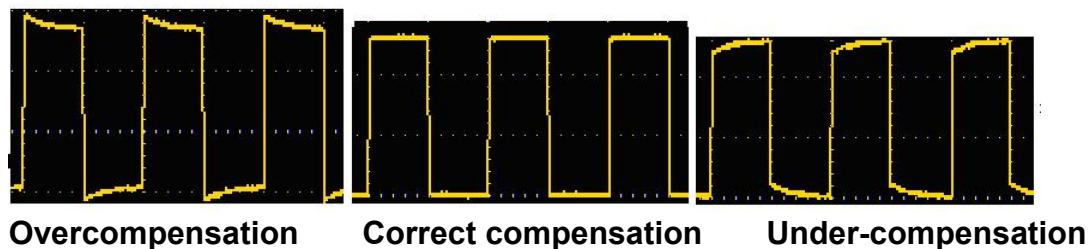


Figure 3-5: Display Waveform of Probe Compensation

3. Repeat the steps if necessary.

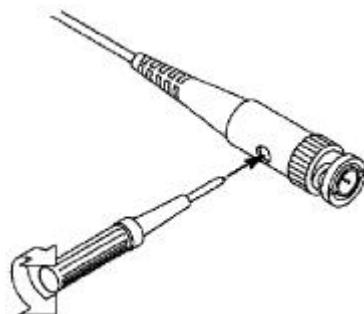


Figure 3-6: Probe Adjustment

## Probe Attenuation Coefficient Setting

The probe has a variety of attenuation coefficients, which will affect the vertical position factor of the oscilloscope.

To change (check) the set value of probe attenuation coefficient in the oscilloscope menu, please follow the steps below:

- (1) Press the **CH1/CH2** key to switch the channel to be used.
- (2) Press the **F3** to select the desired attenuation coefficient. This setting is

valid until it is changed again.



**Note:** The preset setting of the probe attenuation coefficient in the menu when the oscilloscope is delivered is 10X. Make sure that the attenuation switch setting value on the probe is the same as the probe attenuation coefficient option in the oscilloscope menu.

The setting value of the probe switch is **1X** and **10X**. See Figure 3-7.

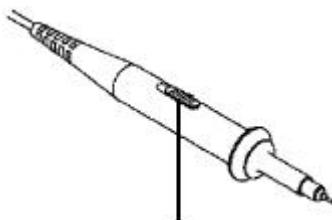


Figure 3-7: Probe Attenuation Switch



**Note:** When the attenuation switch is set to **1X**, the probe limits the bandwidth of the oscilloscope to **5 MHz**. To use the full bandwidth of the oscilloscope, be sure to set the switch to **10X**.

## Safe Use of Probe

The safety ring surrounding the probe body provides a barrier to protect the fingers from electric shocks. See Figure 3-8.



Figure 3-8: Finger Safety Ring of the Probe



**Warning:** To prevent electric shock when using the probe, please keep

your fingers behind the safety ring on the probe body.

To prevent electric shock when using the probe, do not touch the metal part of the probe head when the probe is connected to a voltage source.

---

Before making any measurements, connect the probe to the instrument and connect the ground terminal to the ground.

---

## Vertical System

The vertical system can be used to adjust the vertical scale, the position and other settings of the channel. Each channel has a separate vertical menu, which can be set individually for each channel.

### Vertical position

Press the **CH1/CH2** keys to select the channel, and move the vertical position of the selected channel up or down by pressing the **▲** or **▼** direction keys.

Press the **▲** and **▼** direction keys at the same time to center the vertical position.

### Vertical Volt/Div Setting

The volt/div range is 10mV/div-10V/div (probe 1X), stepping in the 1-2-5 way, or 100mV/div-100V/div (probe 10X), 1V/div-1000V/div (probe 100X), 10V/div-10000V/div (probe 1000X) , 100V/div-100000V/div (probe 10000X).

Press the **CH1/CH2** key to select the channel, and press the **◀** or **▶** direction key to change the volts/div setting of the selected channel.

The description of the vertical system setting menu is as follows:

Function menu	Setting	Description
Switch	ON OFF	Turn on the waveform display. Turn off the waveform display.
Coupling	DC AC GND	The normal sampling method uses the AC and DC components of the input signal. Block the DC component of the input signal. Disconnect the input signal.
Probe	1X 10X 100X 1000X 10000X	Choose one of the values according to the probe attenuation factor to keep the vertical scale reading accurate.
Bandwidth	20MHz Full band	Limit the bandwidth to 20MHz to reduce display noise.

		The bandwidth of the oscilloscope.
--	--	------------------------------------

## Horizontal System

Press the **HOR** key to enter the horizontal system setting menu. Use the **◀** and **▶** direction keys to change the horizontal scale (time base) and horizontal trigger position. When changing the horizontal scale, the waveform is enlarged or reduced relative to the center of the screen. When the horizontal position changes, the position relative to the waveform trigger point changes.

**Note:** Press the **◀** and **▶** direction keys at the same time to center the horizontal position.

The description of the horizontal system setting menu is as follows:

Function menu	Setting	Description
Acqu Mode	Sample	Normal sampling method.
	Peak Detect	Used to detect interference glitches and reduce the possibility of confusion.
Length	4K 8K	Select the length to be recorded.
XY Mode	ON OFF	Choose to turn XY mode on or off.
1/2		Enter the next menu.
Refresh	High Low	Set the refresh rate to "High" or "Low".
Hor center		Set the horizontal trigger position in the middle of the screen.
Counter	ON OFF	Turn on/off counter.
2/2		Return to the previous menu.

## Measuring System

### Automatic Measurement

Press **Measure** **Range** and **F1** key to realize automatic measurement. There are up to

9 types of measurement can be displayed at the bottom left of the screen.

For bandwidth **≤100MHz** models, automatic range types include Frequency, Period, Amplitude, Maximum, Minimum, Peak-to-Peak value, Mean, and RMS.

For bandwidth **200MHz** models, automatic range types include Frequency, Period, Amplitude, Maximum, Minimum, Peak-to-Peak value, Mean, RMS, Rise Time, Fall Time, +PulseWidth, -PulseWidth.

The description of the automatic measurement **Function Menu** is as follows:

Function Menu		Description
Measure	ON OFF	Turn automatic measurement on or off.
	Source CH1 CH2	Set the source.
	Add Del	<p>Freq (F) <input type="checkbox"/> Period (T) <input type="checkbox"/> Amp (Va) <input type="checkbox"/> Min (Mi) <input type="checkbox"/> Max (Ma) <input type="checkbox"/> PK - PK (Vpp) <input type="checkbox"/> Mean(V) <input type="checkbox"/> RMS (RMS) <input type="checkbox"/> Rise Time (RT) <input type="checkbox"/> Fall Time (FT) <input type="checkbox"/> +PulseWidth (PW) <input type="checkbox"/> -PulseWidth (NW) <input type="checkbox"/></p> <p>Add or delete the selected measurement type (displayed in the lower left corner, up to 9 types). Note: The unselected state is <input type="checkbox"/>; The selected state is <input checked="" type="checkbox"/>.</p>

### The automatic measurement of voltage parameters

The oscilloscopes provide automatic voltage measurements including Mean, PK-PK, RMS, Max, Min and Vamp. Figure 3-9 below shows a pulse with some of the voltage measurement points.

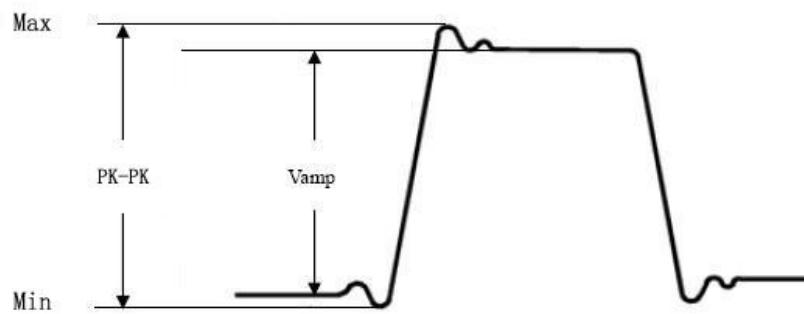


Figure 3-9

**Mean:** The arithmetic mean over the entire waveform.

**PK-PK:** Peak-to-Peak Voltage.

**RMS:** The true Root Mean Square voltage over the entire waveform.

**Max:** The maximum amplitude. The most positive peak voltage measured over the entire waveform.

**Min:** The minimum amplitude. The most negative peak voltage measured over the entire waveform.

**Vamp:** Voltage between Vtop and Vbase of a waveform.

## The automatic measurement of time parameters

The oscilloscopes provide time parameters auto-measurements include Period, Frequency, Rise Time, Fall Time, +D width and -D width.

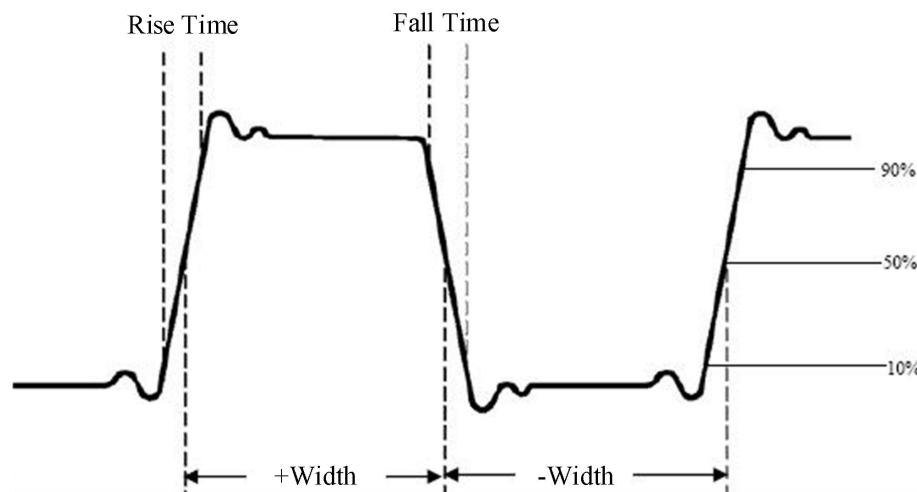


Figure 3-10

**Rise Time:** Time that the leading edge of the first pulse in the waveform takes to rise from 10% to 90% of its amplitude.

**Fall Time:** Time that the falling edge of the first pulse in the waveform takes to fall from 90% to 10% of its amplitude.

**+D width:** The width of the first positive pulse in 50% amplitude points.

**-D width:** The width of the first negative pulse in the 50% amplitude points.

## Cursor Measurement

Press Measure Range and **F2** key to realize cursor measurement.

The description of **Cursor Measurement Menu** is as follows:

Function Menu	Setting	Description
Type	CH1 Voltage	Select to display the CH1 voltage measurement cursor and menu.
	CH2 Voltage	Select to display the CH2 voltage measurement cursor and menu.
	Time	Select to display the time measurement cursor and menu.
	None	Turn off the cursor measurement.
A		When the type is selected as <b>CH1 Voltage</b> or <b>CH2 Voltage</b> , press the arrow keys   to move the cursor line A; when the type is selected as <b>Time</b> , press the arrow keys   to move the cursor line a.
B		When the type is selected as <b>CH1 Voltage</b> or <b>CH2 Voltage</b> , press the arrow keys   to move the cursor line B; when the type is selected as <b>Time</b> , press the arrow keys   to move the cursor line b.
AB		Link A and B. When the type is selected as <b>CH1</b> or <b>CH2</b> , by pressing the arrow keys   two cursors can be moved at the same time; when the type is selected as <b>Time</b> , by pressing the arrow keys   , two cursors can be moved at the same time.

## Display unknown signals using automatic Settings

The automatic setting function enables the oscilloscope to automatically display and measure unknown signals. This function optimizes position, range, timebase, and trigger and ensures a stable display of any waveform. This feature is particularly useful for quickly checking several signals.

To enable auto-setup, perform the following steps:

1. Connect the oscilloscope probe to the measured signal.
2. Press the Auto key, the oscilloscope enters the automatic measurement state, and the measured signal will be displayed on the screen.

## Trigger System

The trigger determines when the oscilloscope starts to acquire data and display waveforms. Once the trigger is set correctly, it can convert an unstable display into a meaningful waveform.

When the oscilloscope starts to acquire data, it first acquires enough data to draw the waveform on the left side of the trigger point. The oscilloscope continuously acquires data while waiting for the trigger condition to occur. When a trigger is detected, the oscilloscope continuously acquires enough data to draw a waveform on the right of the trigger point.

The trigger mode of this series of oscilloscopes is edge trigger.

The edge trigger mode is to trigger on the trigger electrical level of the edge of the input signal, that is, trigger on the rising and falling edges of the input signal.

Entering the edge trigger, the trigger setting information is displayed at the bottom right corner of the screen, e.g. **CH1:DC F -20.0mV**. It indicates that the trigger type is rising edge, the trigger source is CH1, the trigger coupling is DC, and the trigger electrical level is -20.0mV.

The description of the trigger system setting menu is as follows:

Function Menu	Setting	Description
Source	CH1 CH2	Set Channel 1 as the source trigger signal. Set Channel 2 as the source trigger signal.
Coupling	AC DC	Set to prevent DC component from passing through. Set to allow all components to pass through.
Type	Auto	Waveforms can be acquired without detecting trigger conditions.
	Normal	The waveform is acquired only when the trigger conditions are met.
	Single	When a trigger is detected, a waveform is sampled and then stopped.
1/2		Enter the next menu.
Slope	Rising edge	Trigger on the rising edge of the signal.
	Falling edge	Trigger on the falling edge of the signal.
Trigger center		The trigger position is set in the middle of the waveform.
Force		Forced trigger key, which forcibly generates a trigger signal, mainly used in the "normal" and "single" modes of the trigger mode.
2/2		Return to the previous menu.

**Trigger electrical level:** The amplitude level that the signal must cross when setting the waveform acquisition. Press the **Trig/△** key to enter the trigger menu, and press the **▲** or **▼** key to move the trigger electrical level up and down.

## Save Settings

Press the **Save** key to enter the save function menu. By operating the save function menu, oscilloscope settings, reference waveforms, and files can be stored.

### ● Configure

Any setting can be saved inside the oscilloscope, and restore settings can also be called.

The description of **Configure** menu is as follows:

Function Menu	Setting	Description
Object	S1 S2 S3 S4	Set waveform name.
Save		Save the current parameter settings of the oscilloscope to the internal memory.
Recall		Call the settings saved in the current storage location.

### ● Reference Waveform

The actual waveform can be compared with the reference waveform to find out the difference. Press the **Save** key to enter the save function menu, and press **F2** to select the reference waveform to enter the reference waveform menu.

The description of the **Reference Waveform** menu is as follows:

Function Menu	Setting	Description
Source	CH1 CH2	Select the reference waveform to be saved.
Object	R1 R2 R3 R4	Set waveform name.
Display	ON OFF	Call or close the waveform of the current target address in the internal memory. When it displays "On", if there is a stored waveform at the current address, the waveform will be displayed, and the address number and waveform related information will be displayed in the upper left corner; if the current address is not stored, it will display "Address No.: No waveform saved".
Save		Save the reference waveform of the source to the memory.

### ● File

The file can be saved as waveform or image. The waveform and image can be read by plugging and unplugging the USB data cable or selecting MSC in the USB option on the next page of system settings.

The description of **File** menu is as follows:

Function Menu	Setting			Description
File	Wave	File name	wave1 wave2 wave3 wave4	Select the file name of the stored waveform.
		Source	CH1 CH2	Select the waveform channel to be saved.
		Save		Store the waveform of the source in a csv file named by the specified file name.
	Image	File name	image1 image2 image3 image4	Select the file name of the stored wave image.
		Save		Store the current screen image in the bmp file named by the specified file name.

## System Settings

Press the **System** key to enter the system function menu.

### ● Display

The description of the menu is as follows:

Function Menu	Setting	Description
Brightness	10% - 100%	Set the screen backlight to increase in a 10% cycle.
Backlight time	30s 60s 120s Unlimited	Set the screen backlight luminance time. Unlimited means always on.
Menu Time	5s 10s 20s 30s 60s	Set the menu display time.
Turned on	00h: 00m	Display how long it has been powered on.

### ● System

The description of the menu is as follows:

Function Menu	Setting	Description
Language		Set the menu language.
Shutdown Time	10 min 30 min 60 min Unlimited	Set the automatic shutdown time. Unlimited means no shutdown. Please pay attention to this setting if you use the battery only.
1/2		Enter the next menu
About		After pressing this key, the instrument model, serial number, version, and checksum can be displayed.
Upgrade		To upgrade the system. The version of the upgrade package must be higher than the version of the instrument itself.
2/2		Return to the previous menu

#### ● Default setting

Press the **System** key to enter the system setting menu. Select **F3** "Default setting", the screen will prompt "Press < F3 >for default setting Otherwise press the Return key". If you need to perform the default setting, press F3 again to complete the default setting, otherwise, press the return key.

#### ● USB Connection

Press the **System** key to enter the system setting menu. Select **F4** to enter the next page. Press **F1** to select **HID** or **MSC**.

- 1) **MSC [Mass Storage Class]** is used to make USB read the files stored in the built-in memory.
- 2) **HID [Human interface Device]** is used to select the oscilloscope device as the host computer to control and communicate with the computer.

#### ● Factory Settings

To set the factory settings, press the **System** key. Press the menu selection key **F4** to enter the next page. Select **F2** "Factory setting", the screen will prompt "Press < F2 >for factory setting Otherwise press the Return key". If you need to perform the factory setting, press F2 again to complete the factory setting, otherwise, press the return key.

## ● Automatic Calibration

The automatic correction program can quickly make the oscilloscope reach the best condition to obtain the most accurate measurement value. You can execute this program at any time, but if the ambient temperature variation range reaches or exceeds 5°C, you must execute this program.

To perform automatic correction, disconnect all probes or wires from the input connector. Then, press the **System** key. Press the menu selection key **F4** to enter the next page, select **F3** "Auto calibration", the screen will prompt "Disconnect all inputs Press < F3 >to execute auto calibration Otherwise press the Return key". If you need to perform the auto calibration, please disconnect all inputs, perform automatic correction after confirming readiness.

## 4. How to Use the Multimeter


### About This Chapter

This chapter introduces the multimeter function of the oscilloscope step by step, and provides some basic examples of basic operations and how to use the menu.

### Instrument Interface

The multimeter uses four 4-mm safety banana plug input ends: **A**, **mA**, **COM**, and **VΩ→C**.

Multimeter interface:

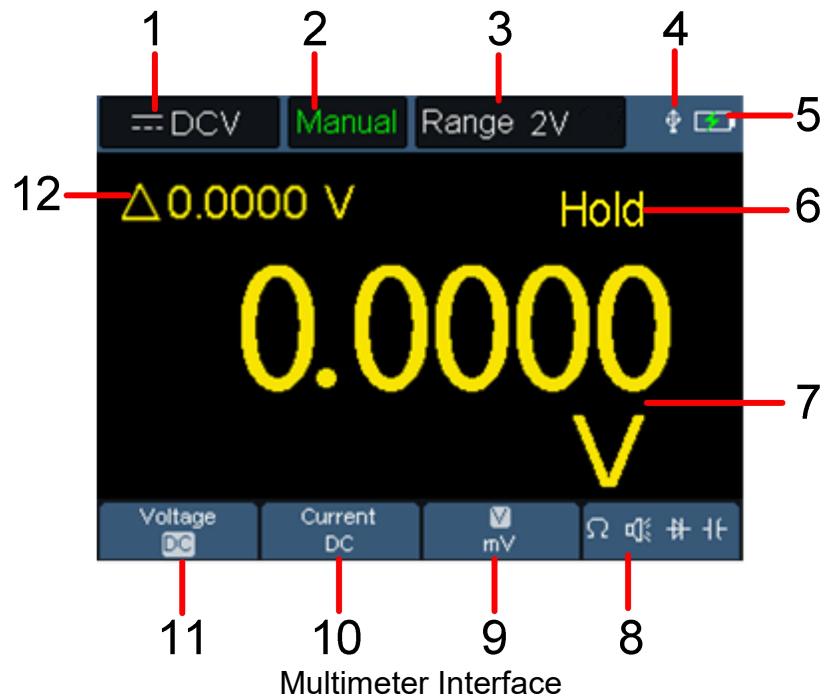

Description:

1. Measurement type indication:

— DCV	-----	DC voltage measurement
~ ACV	-----	AC voltage measurement
— DCA	-----	DC current measurement
~ ACA	-----	AC current measurement

 <b>Resist</b>	-----	Resistance measurement
 <b>Diode</b>	-----	Diode measurement
 <b>Cont</b>	-----	On/Off measurement
 <b>Cap</b>	-----	Capacitance measurement

2. Range indication: **Manual** means manual range; **Auto** means automatic range.

3. Current measurement range.
4. Indicating that there is a USB cable inserted.
5. Battery power indication.
6. "Hold" can keep the current reading on the display.
7. Measurement value and unit.
8. Display of switching resistance, buzzer, diode and capacitance measurement function.
9. The selected range V or mV in voltage measurement; the selected current range A or mA in current measurement.
10. To choose AC or DC current measurement.
11. To choose to AC or DC voltage measurement.
12. Display of relative value measurement function (only available when measuring DC current, DC voltage and resistance).

## 5. How to Use the Spectrum

### About This Chapter

This chapter introduces the spectrum function of the oscilloscope step by step, and provides some basic examples of basic operations and how to use the menu.

### Spectrum Interface

Press the **Mode** key to switch to the spectrum interface, as shown in the image below.

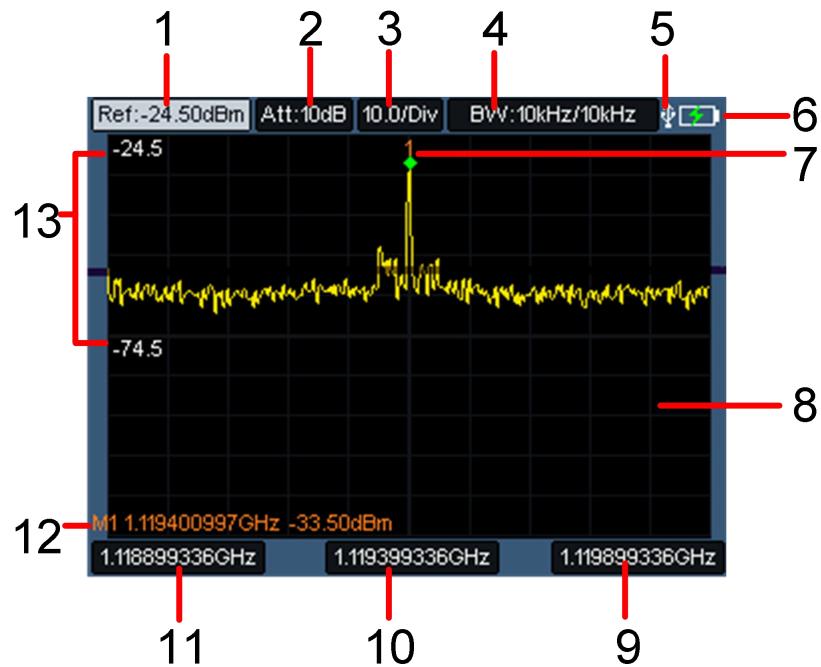


Figure 5-1 Spectrum interface

Description:

1. Reference level.
2. Attenuator.
3. Scale/Div.
4. Bandwidth.
5. Indicating that there is a USB cable inserted.
6. Battery power indication.
7. Marker.

8. Waveform display area.
9. Stop frequency.
10. Center frequency.
11. Start frequency.
12. Marker parameter.
13. Amplitude scale.

## Parameter Input Interface

Parameter input is modified using the numeric keypad, Trig/ $\Delta$  button, and directional keys, as shown in the image below.

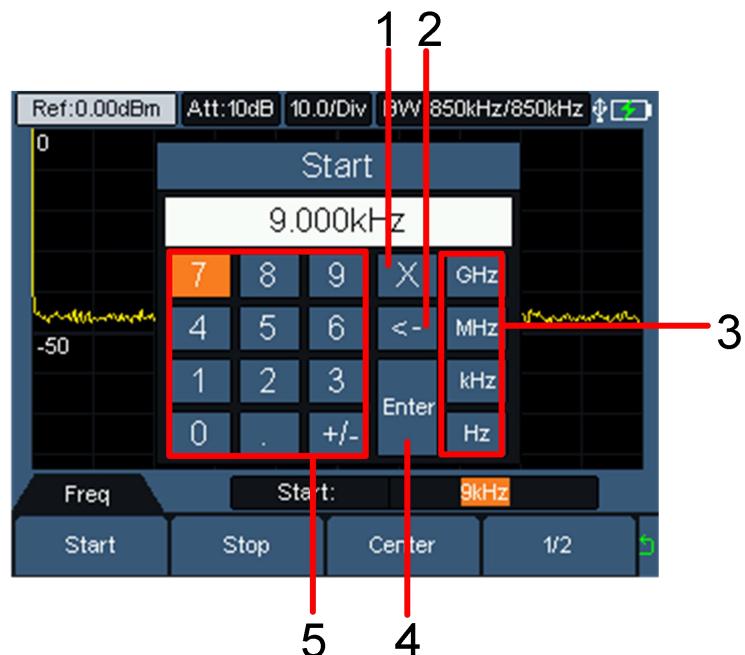


Figure 5-2 Numeric keypad interface

Description:

1. X (cancel button): During the parameter input process, use  $\blacktriangleleft$   $\triangleright$  to move to **X** and press the Trig/ $\Delta$  button to clear all input characters.
2.  $\blacktriangleleft$  (back button): During the parameter input process, use  $\blacktriangleleft$   $\triangleright$  to move to  $\blacktriangleleft$ , and press the \*\*Trig/ $\Delta$ \*\* button to delete characters from right to left.
3. Unit buttons: Press the required unit button after inputting numbers, use  $\blacktriangleleft$   $\triangleright$  to select the appropriate unit and press the Trig/ $\Delta$  button to complete the input.

4. Enter button: During the parameter input process, use   to move to **Enter** and press the **Trig/△** button, at this point, the parameter input is complete, and the parameter will be added with the default unit.
5. Numeric keys: Press keys 0-9 to select, use the   button to move the selection, and press **Trig/△** to confirm the input of the parameter value.

## Frequency System

The frequency menu can be accessed in the following two ways.

- Press **F1** to display the spectrum menu, and then press **F1** to select frequency to enter the frequency menu.
- Press **CH1/2** to enter the frequency menu directly.

### Start Frequency

Press the **F1** key to activate the start frequency.

Note:

- The span and center frequency are changed automatically according to the start frequency. The change of the span would have influence on other system parameters. For more details, please refer to "Span".
- In Zero Span mode, the start frequency, stop frequency and center frequency are always equal. If one is changed the others are updated to match.
- You can modify this parameter using the numeric keys, **Trig/△**, or direction keys.
- If start freq is larger than stop freq when setting, then stop freq will increase automatically to the same value of start freq.

### Stop Frequency

Press the **F2** key to activate the stop frequency.

Note:

- Modifying the stop frequency changes the span and center frequency, and the change of span influences other system parameters, see "Span".
- You can modify this parameter using the numeric keys, Trig/ $\Delta$ , or direction keys.
- If stop freq is larger than start freq when setting, then start freq will decrease automatically to the same value of stop freq.

## Center Frequency

Press the **F3** key to activate the center frequency. If the set center frequency and the current sweep width are not compatible, the sweep width will automatically adjust to the optimal value that corresponds to the desired frequency.

Note:

- Modify the center frequency will automatically adjust the starting and ending frequencies while keeping the sweep width setting unchanged.
- Chang the center frequency is equivalent to shifting the current channel. The adjustable range is limited by the frequency range specified by the indicator.
- In zero sweep width mode, the values of the starting frequency, ending frequency, and center frequency are the same and will be modified together.
- You can modify this parameter using the numeric keys, Trig/ $\Delta$ , or direction keys.

## Span

Press the **F4** key to enter the next page of the menu. Press the **F1** key to select the sweep width and set the frequency range for the current channel. Pressing this key will switch the frequency input mode to: Center Frequency /

Sweep Width.

Note:

- The start and stop frequencies are changed with the span automatically.
- In non-zero span mode, the span can be set down to 100 Hz. And up to the full span described in "Specification". When it is set to the maximum span, it enters full span mode.
- In non-zero sweep width mode, changing the sweep width will automatically adjust the frequency step size and resolution bandwidth if they are set to auto mode. Any change in the resolution bandwidth will cause a change in the video bandwidth (when in auto mode).
- Any change in sweep width, resolution bandwidth, or video bandwidth will result in a change in the scan time.
- You can modify this parameter using the numeric keys, Trig/ $\Delta$ , or direction keys.

## Full Span

Press the **F4** key to enter the next page of the menu. Press the **F2** key to select the full sweep width. Pressing this key will switch the frequency input mode to: Center Frequency / Sweep Width mode, and set the sweep width to the maximum value.

## Zero Span

Press the **F4** key to enter the next page of the menu. Press the **F3** key to select zero sweep width. This will set the sweep width to 0, at which point both the starting and ending frequencies will be equal to the center frequency, and the horizontal axis will represent time. In this mode, the instrument measures the time-domain characteristics of the amplitude at the frequency point corresponding to the input signal. This is useful for observing signals in the time domain, particularly for observing modulated signals.

## Last Span

Press the **F4** key to enter the next page of the menu. Press the **F4** key again to select Last Span. This will return the instrument to the sweep width previously selected.

## Amplitude System

The amplitude menu can be accessed in the following two ways.

- Press **F1** to display the spectrum menu, and then press **F2** to select amplitude to enter the frequency menu.
- Press **HOR** to enter the amplitude menu directly.

## Reference Level

Press the **F1** key to activate the reference level. This allows you to set the maximum power or voltage value that can be displayed in the current window.

Note:

This value is affected by a combination of maximum mixing level, input attenuation, and preamplifier. When you adjust it, the input attenuation is adjusted under a constant max mixing level, meeting:

$$L_{Ref} - a_{RF} + a_{PA} \leq L_{mix}$$

$L_{Ref}$  ,  $a_{RF}$  ,  $a_{PA}$  and  $L_{mix}$  denotes the reference level, the input attenuation, the preamplifier, and the max mixing level respectively.

- You can modify this parameter using the direction keys.

Reference level located at the top of axis grid. Measurement near the reference level would gain better accuracy, but input signal amplitude should not exceed the reference level; if it exceeds, the signal will be compressed and distorted, result in wrong measurement. Analyzer's input attenuation is related with reference level, it can self-adjust to avoid signal compression. Minimum reference level is -80dBm at Log scale under 0dB attenuation.

## Scale/Div

Press the **F2** key to activate the Scale/Div function. This allows you to set the size of each vertical grid unit. This feature is only available when the scale type is set to logarithmic. You can choose from 1, 2, 5, or 10 dB per grid unit. The default value is 10 dB per grid. Once activated, any frequency markers displayed will show readings in dB, and the difference between two frequency markers will also be displayed in dB.

Note:

- By changing the scale, the displayed amplitude range is adjusted.
- The amplitude that can be displayed is from reference level minus 10 times the current scale value to the reference level.
- You can modify this parameter using the direction keys.

## Attenuation

Press the **F3** key to activate the Center Frequency function. If the set center frequency is not compatible with the current sweep width, the sweep width will adjust the RF front-end attenuator to ensure that large signals can pass through the mixer with low distortion (and small signals with low noise). This function is only valid in Internal Mixing Mode, and it is used to adjust the input attenuator of the spectrum analyzer. In Auto Mode, the input attenuator is associated with the reference level.

Note:

- When the pre-amplifier is activated, the maximum input attenuation can be set to 30 dB. If the set parameters do not meet the requirements, the system will ensure the proper operation by adjusting the reference level.
- When the reference level is changed, the attenuation value can be automatically adjusted. However, changing the attenuation does not affect the reference level itself.
- You can modify this parameter using the direction keys.

The purpose of adjusting the attenuator is to ensure that the maximum signal amplitude entering the input mixer is less than or equal to -10 dBm. For example, if the reference level is +12 dBm and the attenuation is 22 dB, the input level to the mixer will be -18 dBm ( $12 - 22 - 8 = -18$ ), with the ultimate goal of preventing signal compression.

You can select [Attenuator Auto Manual] by pressing the **F3** key to set the attenuator to Manual Mode for manual adjustment. The highlighted line under Auto or Manual indicates whether the attenuator is in Auto Coupling Mode or Manual Mode.

When the attenuator is in Manual Mode, press the **F3** key and select [Attenuator Auto Manual] to re-link the attenuator to the reference level.

Note: Maximum input signal amplitude of input attenuator (10dB input attenuation at least) is +27dBm, higher power signal will damage input attenuator or mixer.

## Reference Unit

Press the **F4** key to enter the next menu page, then press the **F1** key to select the reference unit and set the unit for the current channel, including: [dBm], [dBmV], [dB $\mu$ V], [W] and [V].

Note:

- [dBm]  
Choose decibel equals to 1mW as amplitude unit.
- [dBmV]  
Choose decibel equals to 1mV as amplitude unit.
- [dB $\mu$ V]  
Choose decibel equals to 1 $\mu$ V as amplitude unit.
- [W]  
Choose Watts as amplitude unit.
- [V]  
Choose Voltage as amplitude unit.

## Reference Offset

Press the **F4** key to enter the next menu page, then press the **F2** key to activate the reference offset. When there is gain or loss between the device under test and the spectrum analyzer input, an offset value is added to the reference level to compensate for the gain or loss.

Note:

- This value does not change the position of the curve, it only modifies the amplitude reading of the reference level and the cursor.
- You can modify this parameter using the direction keys.
- This offset uses dB as absolute unit, will not change with selected scale

and unit.

## Bandwidth System

Press the **F1** key to display the spectrum menu, then press the **F3** key to select bandwidth, which will enter the bandwidth menu.

### RBW

Press the **F1** key to select the resolution bandwidth. Use the arrow keys to change the resolution bandwidth value. Press the **F1** key again to toggle the resolution bandwidth between auto mode and manual mode.

Note:

- Reducing the value of RBW will increase the frequency resolution, but may also cause sweeps to take longer (Sweep Time is effected by a combination of RBW and VBW when it is in Auto mode).
- RBW decreases with the span (non-zero span) in Auto RBW mode.

### VBW

Press the **F2** key to select the video bandwidth. Use the arrow keys to change the video bandwidth value. Press the **F2** key again to toggle the video bandwidth between auto mode and manual mode.

Note:

- Reducing the VBW to smooth the spectrum line and differentiate small signals from the noise. However, this may cause a longer sweep time. (Sweep Time is effected by a combination of RBW and VBW when it is in Auto mode).
- VBW varies with RBW when it is set to Auto.

## Marker System

Press the **F1** key to display the spectrum menu, then press the **F4** key to enter the next menu page. After that, press the **F1** key again to select the frequency marker, which will enter the frequency marker menu.

### Marker

Press the **F1** key to enter the frequency marker submenu. Use the left and right arrow keys to select the current frequency marker.

(1) Press the **F1** key to select the frequency marker type as Normal.

In normal measurement mode, activate the cursor to measure the X (frequency or time) and Y (amplitude) values at a specific point on the trace. After selecting Normal mode, a cursor labeled with the current cursor number, such as "1" will appear on the trace.

Note:

- If no active marker exists currently, a one will be enabled automatically at the center frequency of current trace.
- You can use the direction keys to move the marker. The readouts of the marker will be displayed on the corner left of the screen.
- The readout resolution of the X-axis corresponds to the span and sweep points. For higher resolution, add sweep points or reduce the span.

(2) Press the **F2** key to select the frequency marker type as Delta.

It is used to measure the delta values of X (Frequency or Time) and Y (Amplitude) between the Reference point and certain point on the trace. When selected, a pair of markers appears on the trace, which are the Reference Marker and the Delta Marker. Will be in the active area and the display area of the upper right corner, showing the amplitude delta value between the two markers and frequency difference. If a single marker already exists, [Delta] will place a static marker and an active marker to the original position and a single marker position. Use the knob, step key, or number keys to move the marker. If there are two markers, press [Delta] directly. However, if [Delta] has been activated, press [Delta] to place the still frequency scale to the active marker. The displayed amplitude difference is expressed in dB, or is the linear unit in terms of the corresponding scale.

Note:

- The Reference Marker will be activated at the position of current marker, or else both the reference marker and Delta Marker will be simultaneously activated at the center frequency location if no marker is active at the

present.

- The location of the Reference Marker is always fixed (both in the X-axis and the Y-axis), while the Delta Marker is active. You can use the direction keys to change the location of Delta Marker.
- The delta of both the Frequency/Time and the amplitude between the two markers are displayed at the corner left of the screen.
- Two ways to enable a certain point as the reference:
  - a) Open a "Normal" marker and locate it onto a point and then switch the marker type into "Delta", creating a new reference, then you can modify the location of the delta point to achieve the delta measurement.
  - b) Open a Delta Marker and place it onto a point, then reselect the Delta menu to locate the marker you opened onto this points, then you can modify the location of the delta point to achieve the delta measurement.

(3) Press the **F3** key to select the frequency marker type as All.

To close the currently active cursor and its related functions, the frequency marker will no longer be displayed.

(4) Press the **F4** key to enter the next menu page, then press the **F1** key to select the frequency marker type as All Off.

To close all active cursors and their related functions, the frequency markers will no longer be displayed.

(5) Press the **F4** key to enter the next menu page, then press the **F2** key to toggle the frequency marker list between On and Off.

Turns on or off the display of all marker table.

## Marker Function

Press the **F2** key to select the frequency marker function. Use the left and right arrow keys to choose the frequency marker you wish to set. Press the **F1** key to toggle the frequency marker noise on or off.

Execute the marker noise function on the selected cursor, and then read the noise power density value at the cursor position. When enabled, the average noise level displayed at the frequency marker is normalized to the noise power per 1 Hz bandwidth.

## Marker->

Press the F3 key to select the Marker->. Use the left and right arrow keys to choose the marker you wish to set.

- (1) Press the **F1** key to select the Marker-> Center Frequency, and set the center frequency equal to the marker frequency. This function allows you to quickly move the signal to the center of the screen.
  - When selecting the "Normal" type cursor, the center frequency is set to the frequency at the cursor position.
  - When selecting the "Delta" type cursor, the center frequency is set to the frequency at the cursor position.
  - At zero sweep width, this function is invalid.
- (2) Press the **F2** key to select the Marker-> Start Frequency, and set the spectrum analyzer's start frequency according to the frequency at the current cursor position.
  - When selecting the "Normal" type cursor, the start frequency is set to the frequency at the cursor position.
  - When selecting the "Delta" type cursor, the start frequency is set to the frequency at the cursor position.
  - At zero sweep width, this function is invalid.
- (3) Press the **F3** key to select the Marker-> Stop Frequency, and set the spectrum analyzer's stop frequency according to the frequency at the current cursor position.
  - When selecting the "Normal" type cursor, the stop frequency is set to the frequency at the cursor position.
  - When selecting the "Delta" type cursor, the stop frequency is set to the frequency at the cursor position.
  - At zero sweep width, this function is invalid.
- (4) Press the **F4** key to enter the next page menu, then press the **F1** key to select the Marker-> Reference Level, and set the spectrum analyzer's reference level according to the amplitude at the current cursor position.
  - When selecting the "Normal" type cursor, the reference level is set to the amplitude at the cursor position.
  - When selecting the "Delta" type cursor, the reference level is set to the amplitude at the cursor position.
- (5) Press the **F4** key to enter the next page menu, then press the **F2** key to select the Marker-> Sweep Width, and set the frequency sweep width equal to the frequency value of the marker. This allows the sweep width to quickly reduce as required.

Note: When selecting this function, please enable the frequency marker.
- (6) Press the **F4** key to enter the next page menu, then press the **F3** key to select the Marker-> Center Frequency, and set the spectrum analyzer's center frequency equal to the marker frequency difference.

Note: When selecting this function, please enable the frequency marker.

## Peak

Press the **F4** key to enter the peak sub-menu. Then, use the left or right arrow keys to select the frequency marker that you wish to set.

- (1) Press the **F1** key to select the maximum peak. This will place a frequency marker at the highest point of the trace, and the frequency and amplitude of this marker will be displayed in the lower left corner of the screen.
- (2) Press the **F2** key to select the peak-to-peak value. This will use the frequency marker to simultaneously find both the maximum and minimum values.
- (3) Press the **F3** key to select the next peak. This will move the active frequency marker to the next highest point on the trace, which is related to the current marker position. Pressing this key repeatedly will allow you to quickly locate lower peak points.
- (4) Press the **F4** key to enter the next page menu, then press the **F1** key to select the left peak. This will search for a peak to the left of the current frequency marker position. The next peak must meet the current peak and peak threshold criteria.
- (5) Press the **F4** key to enter the next page menu, then press the **F2** key to select the right peak. This will search for the next peak to the right of the current frequency marker position. The next peak must meet the current peak and peak threshold criteria.
- (6) Press the **F4** key to enter the next page menu, then press the **F3** key to select peak search. This allows you to set the mode for peak search, which is off by default. When enabled, the mode will automatically search for peaks.
- (7) Press the **F4** key twice to enter the third page menu, then press the **F1** key to select peak height. You can use the arrow keys to set the peak height value.
- (8) Press the **F4** key twice to enter the third page menu, then press the **F2** key to select search mode. You can switch between Maximum Search Mode or Minimum Search Mode.

## Trigger System

Press the **F1** key to display the spectrum menu, then press the **F4** key to enter the next page menu. After that, press the **F2** key to select Trigger, which will take you to the trigger menu.

## Auto

Press the **F1** key to toggle the auto trigger on or off. When the auto trigger mode is enabled, the scan trigger operates as quickly as allowed by the spectrum analyzer, ensuring that trigger conditions are met at all times and continuously generating trigger signals.

Note: Auto trigger and video trigger cannot be enabled simultaneously.

## Video

Press the **F2** key to toggle the video trigger on or off. When the video trigger mode is enabled, you can modify the trigger parameters using the arrow keys. A trigger signal will be generated when the detected video signal voltage exceeds the set video trigger level.

Note: Auto trigger and video trigger cannot be enabled simultaneously.

## Pre-amplifier

Press the **F1** key to display the spectrum menu, press the **F4** key to enter the next page menu, then press the **F3** key to select Pre-amplification. You can enable or disable the RF front-end amplifier switch. When measuring weak signals, turning on the pre-amplifier can reduce the displayed average noise level, making it easier to distinguish small signals from the noise.

## Trace

Press the **F1** key to display the spectrum menu, then press the **F4** key to enter the third menu page. After that, press the **F1** key again to select the trace, which will enter the trace menu.

## Clear & Write

Refresh the current spectrum curve to display the latest spectral trace.

## **Max Hold**

Displays the maximum response of the input signal held in the trace. In this mode, the trace continuously receives scan data and selects the positive peak detection mode.

## **Min Hold**

Displays the minimum response of the input signal held in the trace. In this mode, the trace continuously receives scan data and selects the negative peak detection mode.

## **View**

Displays the current contents of the trace without refreshing, facilitating observation and reading.

## **Automatic Research**

Press the **Auto** key to activate automatic search. It will automatically scan the entire frequency range for signals and adjust the frequency and amplitude parameters to optimal settings. This allows for one-touch signal search and automatic parameter adjustment. Press **Measure** **Range** to exit automatic research.

Note: During the automatic signal search process, parameters such as reference level, scale size, input attenuation, etc., may be adjusted.

## 6. Communication with PC

The oscilloscope supports communications with a PC through USB. You can use the Oscilloscope communication software to store, analyze, display the data and remote control.

To learn about how to operate the software. Please download the oscilloscope communication software on our official download website and view it.

Here is how to connect with PC. Please download the Oscilloscope software package from our official website onto your computer, double-click it, and follow the prompts until the installation is complete.

- (1) **Connection:** Use a USB data cable to connect the **USB Device port** in the right panel of the Oscilloscope to the USB port of a PC.
- (2) **USB Port Settings:** The USB protocol type of the oscilloscope needs to be switched to **HID** (Press **System** → **F4** → **USB**, and switch to **HID**).
- (3) Run the Oscilloscope software after, the connection information in the bottom right corner of the software will turn green.

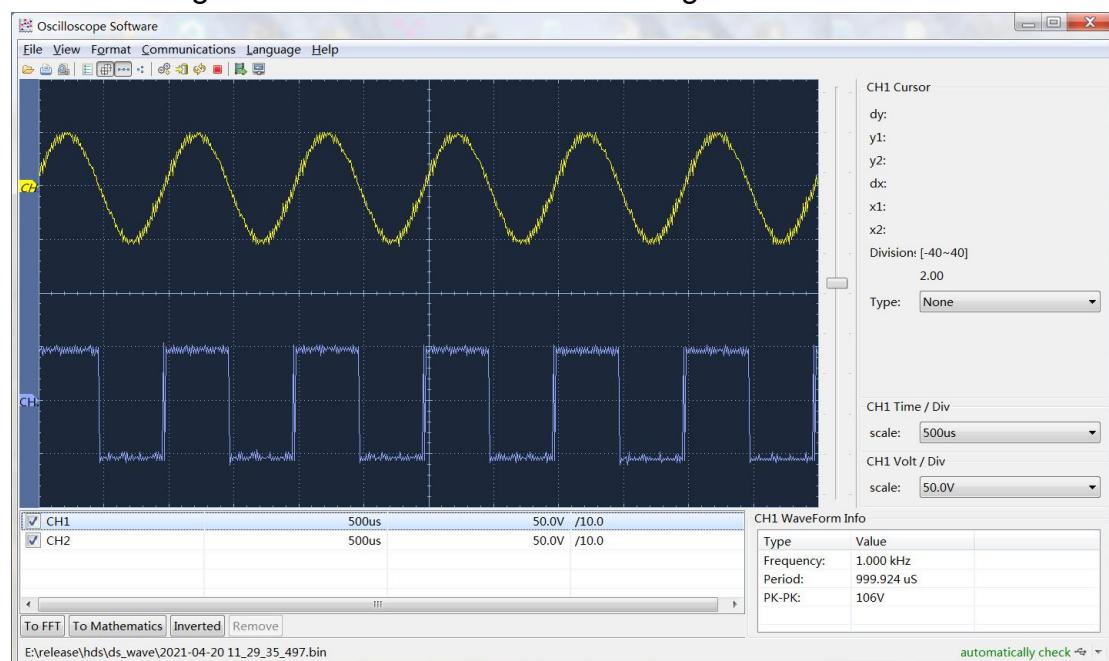


Figure 6-1 Connect with PC through USB port

## 7. Troubleshooting

### 1. The oscilloscope cannot be turned on.

It may be that the battery is completely exhausted. At this time, even if the oscilloscope is powered by the power adapter, the oscilloscope cannot be turned on. You need to charge the battery first, and do not turn on the oscilloscope. Wait for about 15 minutes, and then try to turn on the oscilloscope. If the oscilloscope still cannot be turned on, please contact us to serve you.

### 2. The oscilloscope turns off after a few seconds of startup.

It may be that the battery is exhausted. Check the battery symbol at the top left of the screen.  symbol indicates that the battery is exhausted and must be charged.

### 3. After switching to the multimeter, the measurement type is displayed as E.

It may be that the measurement type was not selected. At this time, press **F4**, the measurement type should display the corresponding measurement type. If E is still displayed, restart the oscilloscope.

### 4. In the oscilloscope state, the measured voltage amplitude value is 10 times larger or smaller than the actual value.

Check whether the channel attenuation coefficient is consistent with the actual probe error ratio.

### 5. In the oscilloscope state, there is a waveform display, but it cannot be stabilized.

- Check whether the source item in the trigger mode menu is consistent with the signal channel actually used.
- Check whether the trigger electrical level has exceeded the waveform range. Only by setting the parameters reasonably, the waveform can be displayed stably.

### 6. In the oscilloscope state, nothing is displayed after pressing

## **RUN/STOP.**

Check whether the trigger mode of the trigger mode menu is normal or single, and the trigger electrical level is out of the waveform range. If so, center the trigger electrical level or set the trigger mode to automatic. In addition, you can press **Auto** to automatically complete the above settings.

**7. In the oscilloscope state, the display speed becomes slower when the average value sampling is set in the acquisition mode or the duration is set longer in the display settings.**

It is normal.

## 8. Technical Specifications

Unless otherwise stated, all technical specifications are applicable to the probe with the attenuation switch set to 10X and this series of oscilloscopes.

The oscilloscope must first meet the following two conditions to meet these specifications and standards:

- The instrument must be operated continuously for more than 30 minutes at the specified operating temperature.
- If the operating temperature variation range reaches or exceeds 5 °C, the system function menu must be opened to execute the "automatic correction" program (see automatic correction in "**System Settings**" on P18).

All specifications are guaranteed except those marked "typical".

### Oscilloscope

Characteristics		Description	
	Vertical resolution	8 bits	
	Channel	2	
Sampling	Sampling method	Sampling, peak detection	
	Real-time sampling rate	HSA2105	125 MSa/s (Dual Channel)
		HSA2307	250 MSa/s (Single Channel)
		HSA2310	500 MSa/s
		HSA2320	1 GSa/s
	Waveform refresh rate	10,000 wfms/s	
Input	Input coupling	DC, AC, ground	
	Input impedance (DC coupling)	1 MΩ±2%, in parallel with 16 pF±10 pF	
	Probe attenuation	1X 、 10X、 100X、 1000X 、 10000X	
	Maximum input voltage	400 V (DC + AC ,PK - PK)	
	Bandwidth limit	20 MHz, Full bandwidth	
Horizontal	Sampling rate range	0.25 Sa/s~250 MSa/s	

Characteristics		Description	
Vertical	Waveform interpolation	(Sin $x$ )/ $x$	
	Sweep speed range (S/div)	HSA2105 HSA2307 HSA2310 HSA2320	5ns/div - 1000s/div, Stepping in the 1-2-5 way 2ns/div - 1000s/div, Stepping in the 1-2-5 way
	Time base accuracy	$\pm 100$ ppm	
	Record length	8K or 4K optional	
	Sensitivity (Volt/div) range	10 mV/div $\sim$ 10 V/div	
	Displacement range	HSA2105 HSA2307	$\pm 6$ div
		HSA2310 HSA2320	$\pm 2$ V (10 mV/div – 200 mV/div); $\pm 100$ V (500 mV/div – 10V/div)
	Analog bandwidth	HSA2105	50 MHz
		HSA2307	70 MHz
		HSA2310	100 MHz
		HSA2320	200 MHz
	Single bandwidth	Full bandwidth	
	Low frequency response (AC coupling, -3dB)	$\geq 10$ Hz	
	Rise time (typical on BNC)	HSA2105 HSA2307	$\leq 5$ ns
		HSA2310	$\leq 3.5$ ns
		HSA2320	$\leq 1.75$ ns
		DC gain accuracy	
Measurement	Cursor	$\Delta V, \Delta T$	
	Automatic	Period, Frequency, Mean, PK-PK, Max, Min, Amplitude, RMS, Rise Time, Fall Time, +PulseWidth, -PulseWidth	
Triggering	Source	CH1, CH2	
	Type	Edge	
	Coupling	DC, AC	
	Trigger type	Auto, normal, single	

Characteristics		Description
	Trigger electrical level range	±4 div from the center of the screen
	Trigger electrical level accuracy	±0.3 div
	Trigger displacement	According to Record length and time base
	Edge triggering	Slope
		Rising edge, falling edge

The output of the probe compensator:

Characteristics	Description
Output voltage (typical)	3.3Vpp, High-Z
Frequency (typical)	Square wave 1 kHz (±1%)

## Multimeter

Characteristics	Description		
Digital display	20,000 readings		
Measurement type	Voltage, current, resistance, capacitance, on/off, diode		
Maximum Input voltage	AC : 750V DC : 1000V		
Maximum Input current	AC : 10A DC : 10A		

Basic function	Range	Minimum resolution	Accuracy
DC voltage	20.000mV	0.001mV	±(0.5%+15dig)
	200.00mV	0.01mV	±(0.3%+10dig)
	2.0000V	0.1mV	±(0.3%+5dig)
	20.000V	1mV	
	200.00V	0.01V	
	1000.0V	0.1V	
AC voltage <sup>[1]</sup>	20.000mV	0.001mV	±(0.8%+10dig)
	200.00mV	0.01mV	
	2.0000V	0.1mV	
	20.000V	1mV	
	200.00V	0.01V	

Basic function	Range	Minimum resolution	Accuracy
	750.0V	0.1V	±(1.0%+10dig)
	Frequency range: 40Hz-1000Hz		
DC current	20.000mA	0.001mA	±(1.0%+10dig)
	200.00mA	0.01mA	±(0.8%+10dig)
	2.0000A	0.0001A	±(2.5%+10dig)
	10.000A	1mA	
Overload protection: mA function: self-healing fuse 400 mA/250 V; Ampere function: 10A/600 V, D5.2*20, fast-acting fuse			
AC current <sup>[1]</sup>	20.000mA	0.001mA	±(1.2%+10dig)
	200.00mA	0.01mA	±(1.0%+10dig)
	2.0000A	0.0001A	±(2.8%+10dig)
	10.000A	1mA	
Frequency range: 40Hz-1000Hz Overload protection: mA function: self-healing fuse 400 mA/250 V; Ampere function: 10A/600 V, D5.2*20, fast-acting fuse			
Resistance	200.00Ω	0.01Ω	±(0.8%+10dig)
	2.0000kΩ	0.1Ω	±(0.8%+5dig)
	20.000kΩ	1Ω	±(0.8%+3dig)
	200.00kΩ	10Ω	
	2.0000MΩ	0.1kΩ	
	20.000MΩ	1kΩ	±(1.0%+3dig)
	100.00MΩ	0.01MΩ	±(5.0%+10dig)
Capacitance <sup>[1]</sup>	2.000nF	1pF	±(3.0%+10dig)
	20.00nF	10pF	
	200.0nF	100pF	
	2.000μF	1nF	
	20.00μF	10nF	
	200.0μF	100nF	
	2.000mF	1uF	
Others	On/Off test	√ (<50Ω)	
	Diode test	√(<0-2V)	
	Auto range	√	
	TRMS	√	

[1] : When measuring AC voltage/current or capacitance, accuracy guarantee range is 5% to 100% of the range.

## Spectrum

Characteristics		Description			
Frequency					
Range	HSA2105	9 kHz to 1.5 GHz			
	HSA2307				
	HSA2310	9 kHz to 3.0 GHz			
	HSA2320				
Resolution	100 Hz				
Frequency Span					
Range	Zero span, 300 Hz to maximum bandwidth				
Uncertainty	$\pm$ Span / (number of sweep points -1)				
Bandwidth					
Resolution	0.2, 1, 3, 10, 30, 100, 300, 600, 850 kHz				
Bandwidth					
Max. Input Level					
Input DC voltage	50V				
Continuous power	Attenuator= 30 dB				
	+20 dBm (100 mW)				
Max. damage level	+20 dBm (100 mW)				
Internal Reference Frequency					
Reference Frequency	26MHz				
Reference Frequency Accuracy	$\pm$ [ (Time since last calibration * Frequency aging rate) + Temperature stability + Initial accuracy]				
Initial Calibration Accuracy	<3ppm				
Temperature Stability	0°C to 50°C, reference temperature is 25°C				
	<1ppm				
Frequency Aging Rate	<2ppm/ year				
Display Average Noise Level (DANL)					
Frequency	(Input attenuation 0dB, PA OFF, 100kHz resolution bandwidth, normalize to 1Hz, 20°C - 30°C)				
Preamp Off	10MHz to 1 GHz	<-120 dBm			
	1 GHz to 2 GHz	<-120 dBm			
	2 GHz to 3 GHz	<-115 dBm			

Preamp On	10MHz to 1 GHz	<-140 dBm
	1 GHz to 2 GHz	<-140 dBm
	2 GHz to 3 GHz	<-135 dBm
<b>Level display</b>		
Logarithmic level	0.01 dB to 99 dB	
Linear level	0 to reference level	
Number of display points	301	
Number of traces	1	
Units	dBm, dBmV, dB $\mu$ V, W, V	
<b>Input attenuation error</b>		
Setting range	0 dB to 30 dB, step by 1 dB	
Switching uncertainty	fc= 50 MHz, relative to 10 dB, 20°C to 30°C <2.5 dB	
<b>Absolute Amplitude Uncertainty</b>		
Uncertainty	fc = 50 MHz, preamplifier off, attenuation = 10 dB, input signal level = -10dBm, 20°C to 30°C <1.5 dB	
<b>RBW Switching Uncertainty</b>		
Uncertainty	relative to 10 kHz RBW <2.0dB	
<b>Reference level</b>		
Range	-80dBm to +20 dBm, step by 1 dB	
<b>Pre-amplifier</b>		
Gain	20 dB (typical value)	
<b>Level Measurement Uncertainty (95% confidence level, S/N &gt; 20 dB, RBW = VBW = 1 kHz, preamplifier off, attenuation = 10 dB, -50 dBm &lt; input level ≤ 0 dBm, fc &gt; 10 MHz, 20°C to 30°C)</b>		
Uncertainty	<2.0 dB	
<b>RF input VSWR (Attenuator setting ≥ 10 dB)</b>		
VSWR	< 2.0 (Nominal)	
Input-related spurious signals	The mixer level is -30 dBm	
	< -50 dBc	
<b>Connector</b>		

RF Input	Impedance	50 Ω, typical
	Connector	SMA female connector

## General Technical Specifications

### Display

Characteristics	Description
Display type	3.5-inch color LCD display
Display resolution	320 horizontal × 240 vertical pixels
Display color	65536 colors
Display Contrast	Adjustable

### Power supply

Characteristics	Description	
Power supply	DC INPUT: 5VDC, 2A	
Power consumption	HSA2105	<5 W
	HSA2307	
HSA2310		
	HSA2320	≤6 W
Battery	2600mAh*2 (3.7V, 18650)	

### Surroundings

Characteristics	Description
Temperature	Working temperature: 0°C - 40°C Storage temperature: -20°C - +60°C
Relative humidity	≤90%
Height	Operating: 3,000 meters Non-operating: 15,000 meters
Cooling method	Natural cooling

### Mechanical specifications

Characteristics	Description
Dimensions	198 mm (length) × 96mm (height) × 38 mm (width)
Weight	About 0.6 kg (main unit, without battery)

**Calibration interval:** The recommended calibration interval is one year.

## 9. Appendix

### Appendix A: List of Accessories

- 1 USB cable
- A set of passive probes (2 pieces)
- 1 set of multimeter probes (one red and one black)
- 1 Quick Guide

### Appendix B: Maintenance and Cleaning

#### General maintenance

Do not store or place the instrument in a place where the LCD screen will be exposed to direct sunlight for a long time.

**Caution:** Do not let spray, liquid or solvent touch the instrument or probe to prevent damage to the instrument or probe.

#### Cleaning:

Check the instrument and probe frequently according to the operation. Clean the external surface of the instrument as follows:

1. Please wipe the floating dust outside the instrument and probe with a soft cloth. When cleaning the LCD, be careful not to scratch the transparent LCD protection screen.
2. Wipe the instrument with a damp but non dripping soft cloth. Please disconnect the power supply. It can be scrubbed with soft detergent or water. Do not use any abrasive chemical cleaning agent to avoid damaging the instrument or probe.



**Warning:** Please make sure the instrument is dry before re-energizing to avoid electrical short circuit or personal injury caused by moisture.

# Charging and Replacement of Battery

During the long-term storage of the device, the battery may be too low due to the self-discharge of the lithium battery and the device cannot be turned on. This is a normal phenomenon.

Please use the attached adapter to pre-charge the device for 0.5 to 1 hour (depending on the storage time) before turning it on. In addition, if the device is not used for a long time, it is recommended to charge it at regular intervals to avoid over-discharge of the lithium battery.

## Battery Charging

The lithium battery may not be fully charged when delivered. To make the battery be charged, refer to the following table to charge and discharge:

Model	Charging	Discharging
For models <100MHz	≥4.5h	≥4h
For models ≥100MHz	≥4h	≥3h

The power supply and battery indicator symbols in the upper right corner of the screen are explained as follows:

 symbol indicates the power-on charging status;

 symbol indicates battery power supply;

 symbol indicates that there is only about five minutes of use time left.

Please charge as soon as possible according to the relevant tips to avoid damage to the battery.

## Charging Method

Charging the battery through the power adapter: Connect the oscilloscope to the power socket through the USB data cable and power adapter delivered with the machine for charging.

Charge the oscilloscope through the USB interface: Connect the oscilloscope to a computer or other equipment through a USB data cable for charging (pay attention to the load capacity of the power supply equipment to avoid abnormal operation of the equipment).

## Note

To avoid overheating of the battery during charging, the ambient temperature must not exceed the allowable value given in the technical specifications.

### **Replacement of Lithium Battery**

Generally, the battery does not need to be replaced. However, when necessary, it can only be replaced by qualified personnel, and only **lithium batteries of the same specification** can be used.